




Installation Instructions Cast-In-Place Cast Iron Detectable Warning

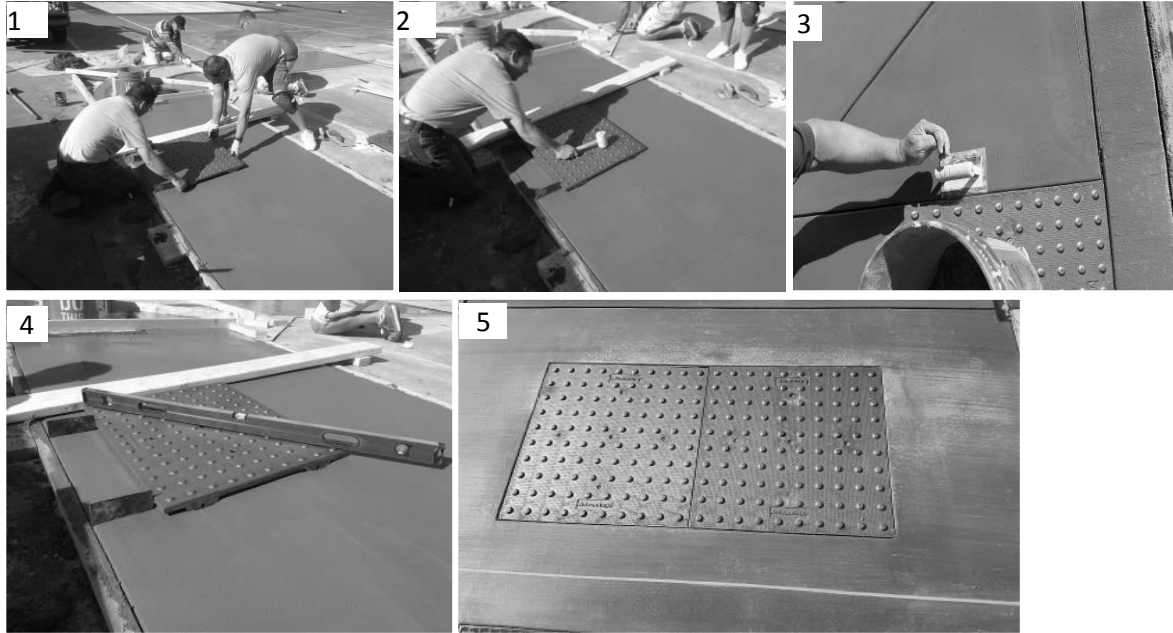

1. Maintaining a 3-4 slump range, pour and float the concrete and prepare for tile installation.
2. Without removing any concrete, place the tile on the curb ramp 6"-8" from the curb line.
3. Tamp the tile in grid pattern across the top face, embedding the tile into the concrete using a rubber mallet or vibrate into place using a vibrating mechanism fixed with a soft base such as wood.
4. Create an edge around the perimeter of the tile using a 3/8" radius edging tool then float the concrete around the tile's perimeter using a steel trowel.
5. Using a smart level make sure ramp and tile are in compliance with ADA requirements and in accordance with contract documents.
6. Apply a broom-finish to the curb ramp and ensure face of tile is clean and free of any concrete debris.

Please call 1(800) 679-4022 with any additional questions regarding the installation.