




Installation Instructions Cast-In-Place Cast Iron Detectable Warning

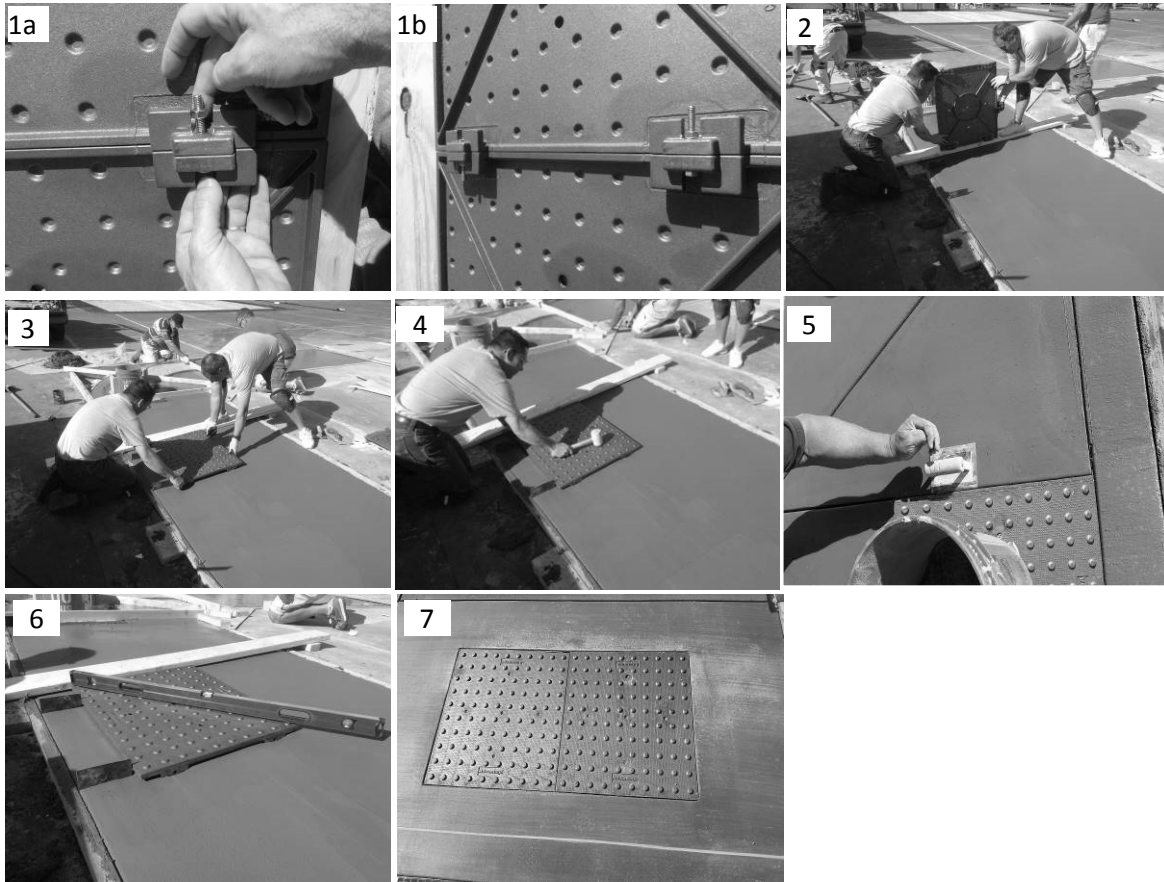

1. Connect multiple tiles with 3/8" x 1-3/4" bolts (figure 1a and 1b)
2. Maintaining a 4-7 slump range, pour and float the concrete and prepare for tile installation.
3. Without removing any concrete, place the tile on the curb ramp 6"-8" from the curb line.
4. Tamp the tile in grid pattern across the top face, embedding the tile into the concrete using a rubber mallet or vibrate into place using a vibrating mechanism fixed with a soft base such as wood.
5. Create an edge around the perimeter of the tile using a 3/8" radius edging tool then float the concrete around the tile's perimeter using a steel trowel.
6. Using a smart level make sure ramp and tile are in compliance with ADA requirements and in accordance with contract documents.
7. Apply a broom-finish to the curb ramp and ensure face of tile is clean and free of any concrete debris.

Please call 1(800) 679-4022 with any additional questions regarding the installation.

Advantage Tactile Systems Inc.
241 Main Street, Suite 100 Buffalo, NY 14203 Tel: 1-800-679-4022
www.advantagetactile.com